

How to Use General Spring Carriers

Step 1



 
Hold the Spring Carrier in one hand so that you can see the tail of the spring on top, next to the plug end which you are about to remove.

Step 2




Next, place the wrench under the spring and hook the single tooth of the wrench onto the tail end of the spring. Let the curve of the spring nest into the curve of the wrench.

Step 3

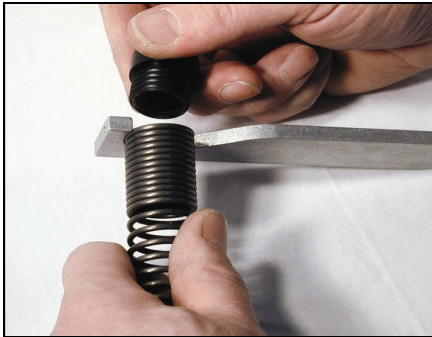

Grip the Spring Carrier in one hand and push down while the wrench is still engaged. With your other hand, open the plug end of the carrier by turning it toward you. (counter-clockwise)

 Step 4

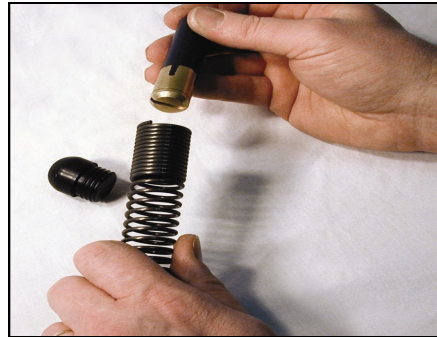

Place the transmitter into the carrier, metal end first. (Be sure your battery has been placed in the transmitter correctly as well. The positive end of the battery goes in first.)

Step 5



Simply screw the plug end back onto the carrier.



For **Spring Carriers 1.4, 1.5, 1.7**; put a 1/4" or smaller round shafted screw driver or other tool through the hole in the plug end to turn it.