









# Cutter Application Chart

CUTTER NAME	CUTTER PART NUMBER	CUTTER APPLICATION	FOR FOLLOWING CABLES	PRODUCT
Arrow Head	AH	Starting Drill (Gets water flowing)	5/16" – 3/8" 1/2" – 9/16"	
Flexible Arrow Head	FAH	Starting Drill (Gets water flowing)	5/16" – 3/8"	
Boring Gimlet	BG	For removing loose objects	5/16" – 3/8"	
Down Head Boring Gimlet	DHBG	For removing loose objects (Goes down waste, not up stack)	5/16" – 3/8"	
Down Head Fitting	DFH	Down Head adapter for small cutters	5/16" – 3/8"	
1-1/4" Side Cutter Blades	1-1/4SCB	For cutting and scraping	5/16" – 3/8"	
2" – 3" – 4" Side Cutter Blades	2SCB – 3SCB or 4SCB	For cutting and scraping	1/2" – 9/16" 5/8" – 3/4"	
1-1/2" U-Cutter	1-1/2UC	For cutting and scraping	3/8" – 1/2" 9/16"	
2" – 3" – 4" U-Cutter	2UC – 3UC or 4UC	For cutting and scraping	1/2" – 9/16" 5/8" – 3/4"	
Small Retrieving Tool	RTR-1	For removing loose objects and broken cables	3/8" – 1/2" – 9/16"	
Spear Head	SHD	Starting Drill (Gets water flowing)	5/8" – 3/4"	
3" and 4" Rotary Saw Blades	3RSB or 4RSB	For cutting roots	5/8" – 3/4"	
3" and 4" Heavy Duty Saw Blade	3HDB or 4HDB	For cutting roots (Cuts going into and out of pipe)	5/8" – 3/4"	
3" and 4" Heavy Duty Side Cutters	3HDSC or 4HDSC	For cutting and scraping	5/8" – 3/4"	
Large Retrieving Tool	RTR-2	For removing loose objects and broken cables	5/8" – 3/4"	
Root Ripper™	RP-2	Screws into roots	5/8" – 3/4"	
Clog Chopper™	1CG – 1-1/2CG 2CG – 2-1/2CG 3CG – 4CG	For cutting and scraping	3/8" – 1/2" – 9/16" 5/8" – 3/4"	

Cutters for 5/8" and 3/4" cables can be adapted to 1-1/4" cables.

**General** *General Wire Spring Co.*  
**PIPE CLEANERS**  
 1101 Thompson Avenue  
 McKees Rocks, PA 15136 USA  
 800-245-6200 or 412-771-2771 Fax: 412-771-2771  
[www.drainbrain.com](http://www.drainbrain.com)

