

ROOT 66 PARTS LIST

Note: Parts shown indented beneath another part are included with the item they are listed under.

ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION
178275	Frame & Clutch Housing Assembly	178615	Coil Spring
178280	Clutch Housing	178660	Ball Bearing
178285	Grease Fittings (2)	178670	Mounted Collar w/Knob
178310	Bronze Bushing	178680	Knob
178315	Rear Casting	178690	Set Screws (3)
178320	Grease Fitting (1)	178695	Grease Fitting
178325	Socket Head Cap Screws (4)	178710	Flange Bearing Set (2)
178350	Drip Guard	178730	Fiber Washers (3)
178360	Leg Assembly	178740	Brake Disc
178365	Left & Right Leg Assembly	178750	Spacer
178390	Rubber Pads, Screws, Nuts & Washers (4)	178760	Slotted Tube
178370	Front Leg Spacer	178770	Snap Ring
178375	Rear Leg Spacer	178230	Container (for 3/8" & 5/16" Cables)
178380	Bolts (4)	178805	Container Shell
178385	Cutter Bag	178810	Container Front
178430	Clutch Assembly	178820	Container Back
178440	Ball Thrust Bearing	178825	Screws & Clips (3)
178450	Shaft w/Key	178840	Spindle for Large Drum
178460	Large Bevel Gear w/Set Screw	178850	Washer (2)
178470	Front Cone w/Pins	178855	Thrust Bearing Race
178410	Guide Pins (3)	178860	Nut
178480	Set Screw	178900	1/3 hp Motor w/Reverse Switch & GFCI
178500	Clutch Jaws, Pins & Springs (3)	168880	1/2 hp Motor w/Reverse Switch & GFCI
178510	Springs Only (3)	178910	Small Bevel Gear w/Set Screws
178415	Spring Pins Only (3)	178920	Mounting Bolts (2)
178520	Rear Cone w/Shaft	136010	GFCI w/10' Power Cord
178530	Ball Thrust Bearing	178940	Reverse Switch Assembly
178540	Rack & Pinion Assembly	178950	Switch Box Only w/Cover & Screws
178550	Pinion Gear	178960	Reverse Switch
178560	Clutch Handle	178965	Rubber Switch Boot
178570	Retaining Knob	178973	Switch Guard
178580	Drive Collar (Rack)	178970	Motor Drip Shield
178590	Hair Pin Spring	178250	Rear Guide Hose
178600	Retaining Washer	178240	Dolly for Root 66
178610	Snap Ring	132210	Set of Safety Decals
		140840	Band-It Splashguard

ROOT 66 SCHEMATIC DIAGRAM

