
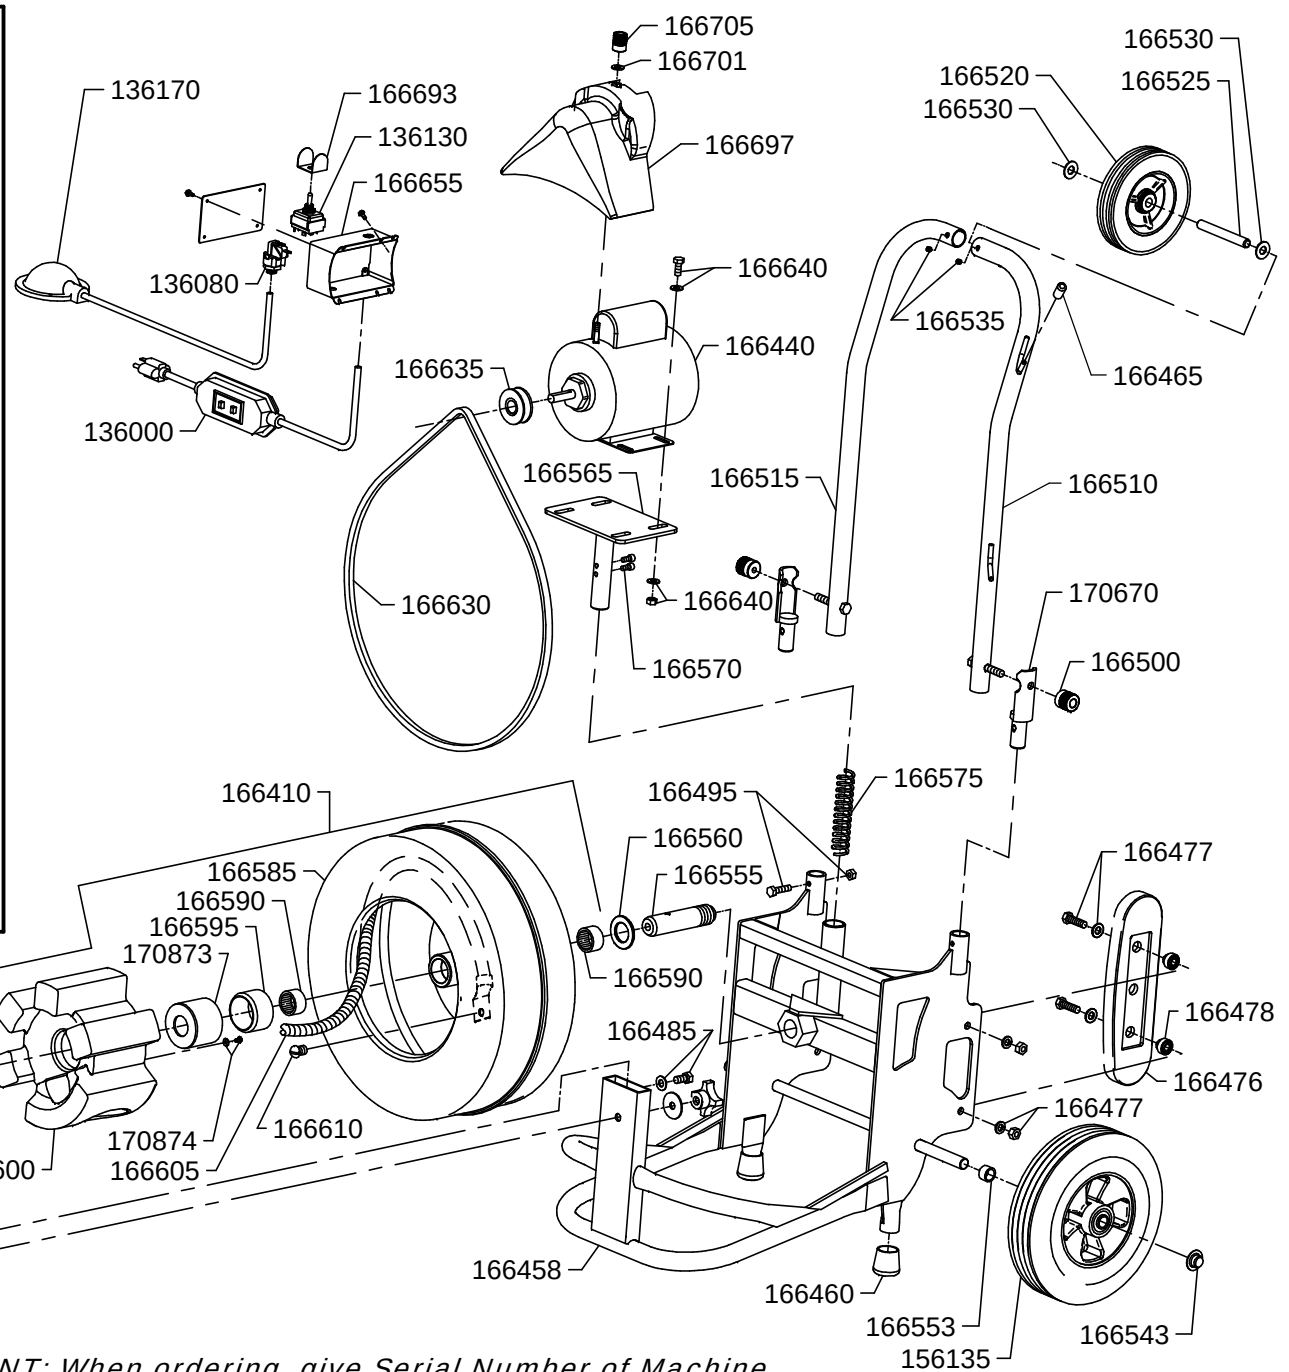


SEWEROOTER T-4 PARTS LIST

Note: Parts shown indented beneath another part are included with the item they are listed under.

ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION
166454	Complete Frame	166650	Foot Switch & Reverse Switch Assembly
166458	Frame Only w/ 5/8" Axle	166655	Box Only w/Cover & Screws
166460	Rubber Leg Tips (2)	136170	Foot Pedal & Hose
166465	Rubber Cord Wrap Tips	166665	Hose Clamp
166470	Cutter Bag	136060	Pedal Only
166475	Distributor Tube Clamp	136080	Power Switch Diaphragm
166480	Clamp Locking Knob	136050	Air Hose
166485	Clamp Screws & Washers (2)	136130	Reverse Switch (3-Way)
166476	Stair Climber	166693	Switch Guard
166477	Bolts, Nuts, Flat Washers, & Lock Washers (2)	166695	Strain Relief Nut
166478	Plastic Spacers (2)	166697	Belt Guard
166487	Guide Tube Holder	166705	Knob for Belt Guard
170670	Hinge	166701	Belt Guard Washer
166495	Hinge Bolts & Nuts (2)	166420	Power Feed Cable Assembly
166500	Handle Locking Knobs (2)	156355	Feed Body for One Piece Feed Control Disk
166505	Handles	156360	Lifting Spring
166510	Left Handle	156363	Guide Pins (2)
166515	Right Handle	155012	Mounting Stud
166520	Handle Wheel	156370	Mounting Knob
166525	Handle Wheel Axle	155021	Spout for One Piece Feed Control Disk
166530	Felt Washers (2)	156380	Steel Washer
166535	Set Screws (2)	155026	Top Roller Assembly
156135	10" Mag Wheel w/Cap	155031	Top Carrier Only
166543	10" Mag Wheel Retainer Cap (2)	155036	Top Swing Pin
166553	10" Mag Wheel Spacer (2)	155041	Feed Roller Shaft
166555	Drum Shaft	136120	Feed Roller w/Bearing
166560	Thrust Bearing	155060	Feed Pressure Knob
166565	Motor Support w/Bolts, Nuts, & Washers	155062	Limiting Nut
166570	Guide Screws (2)	155066	Pressure Spring
166575	Motor Support Spring	155070	Ball Bearing
166580	Flexitube Distributor Tube Assembly	155076	Ball Bearing Holder
166410	Drum Complete	155080	Top Cover Plate
166585	Drum Shell	155085	Plate Screws (3)
166590	Drum Bearings (2)	155091	Bottom Roller Assembly
166595	Drum Bushing	155096	Bottom Carrier Only
166600	Inner Drum Cage	155100	Swing Pin
170873	Inner Drum Cage Bushing	155106	Bottom Roller Shaft
170874	Screws & Washers (6)	136120	Bottom Feed Roller w/Bearing
166605	Drum Connecting Cable w/ Nut, Screws, & Lock Washer	155130	Thrust Bearing
166610	Connecting Cable Nut, Screws, & Lock Washer	155135	Cable Adjustment Plate
166615	Drum Retaining Bolt w/Grease Fitting	155140	Plate Screws (3)
166620	Retaining Washer	155150	Feed Control Disk (One Piece)
166625	Felt Washer	155195	Wave Washer for One Piece Feed Control Disk
166624	High Collar Lock Washer	136110	Set of Feed Roller Assemblies (3)
166440	1/3 hp Capacitor Motor w/Foot Switch, Reverse Switch, & GFCI	166430	Guide Tube for Metro Rooter
166630	V-Belt (55" for 1-1/2" Pulley)	146160	Guide Tube Extension
166633	V-Belt (56" for 2" Pulley)	132210	Set of Safety Decals
166635	V-Belt Pulley (1-1/2" for 55" V-Belt)	170990	Condensed Operating Instructions (Instructions w/Chain & Fittings, Connector, & Screw)
166637	V-Belt Pulley (2" for 56" V-Belt)	166725	Complete Operating Instructions
136180	Optional Slip Clutch	130060	Cutter Set for 9/16" Cables
166640	Motor Support Bolts, Nuts, Washers	130080	Senior Cutter Set for 5/8" and 3/4" Cables
136000	20' Power Cord w/GFCI	122030	(75EM4) Flexicore Cable, 5/8" x 75 ft. w/ Male & Female Conn.
		120970	(100EM3A) Flexicore Cable, 9/16" x 100 ft. w/Male & Female Conn.

SEWEROOTER T-4 SCHEMATIC DIAGRAM

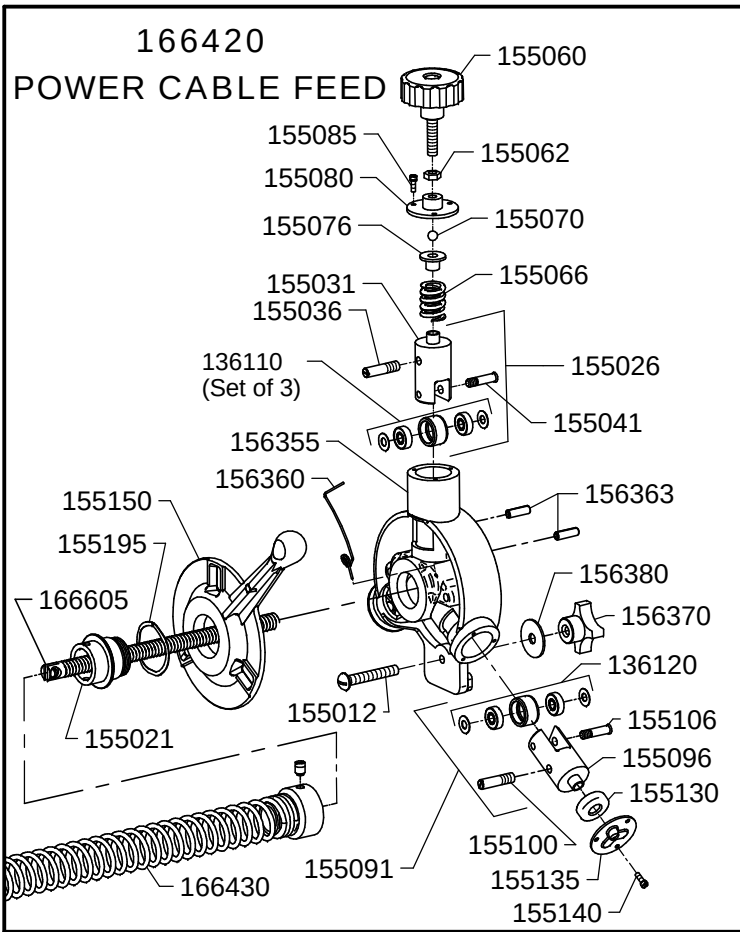

POWER CABLE FEED
SEE DETAIL

IMPORTANT: When ordering, give Serial Number of Machine.